
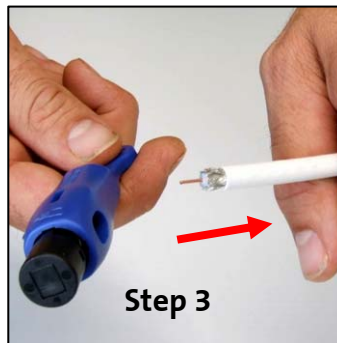


# Mounting instructions for Self-Install™ IEC connectors

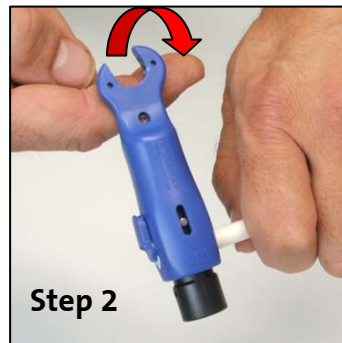

**STEP 1:** Press and hold the black button and insert cable until the mechanical stop as shown. Release the button.

**STEP 2:** Turn the tool clockwise 5-7 times.

**STEP 3:** Make sure to take a good grip both on tool and cable. Pull out the cable from the tools (without pressing the tool button!). Press the tool button and remove the scrap from the tool before another stripping takes place.

**STEP 4:** Fold exposed braid back over jacket as shown. If another tool that the one shown here is used for cable preparation, then please make sure that the stripping dimensions is 6.5/6.5 mm for inner conductor and dielectric.

**STEP 5:** Push on the back nut over the cable.

**STEP 6:** Push the connector on the cable as shown. The sleeve must slide between the foil and the braid of the cable.

**STEP 7:** Screw the back nut on the connector and tighten it.

Distributor:

**CABELCON**  
connectors

Corning Cabelcon ApS, Industriparken 10, DK 4760 Vordingborg  
Tel: +45 55 98 55 99 · Fax: +45 55 98 55 04  
E-mail: [cabelcon@cabelcon.dk](mailto:cabelcon@cabelcon.dk) · [www.cabelcon.dk](http://www.cabelcon.dk)

Rev 160112