

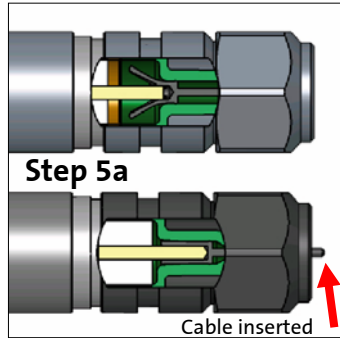


# MOUNTING INSTRUCTIONS - RG11 QUICKMOUNT™ CONNECTORS

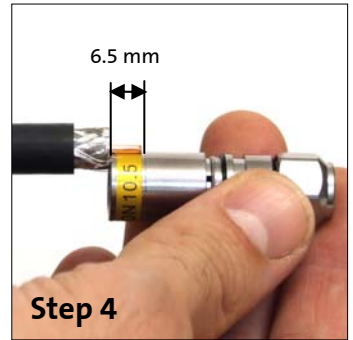

- STEP 1:** Insert the cable and make sure that the cable is in level with the tool edge as shown. Rotate 5-7 times clockwise.
- STEP 2:** Take a solid grip on both tool and the cable. Pull the cable out of the tool without opening the jaws.
- STEP 3:** This is how the cable should look before installation. Make sure that the stripped area is clean and free of all cut braid. Loose threads can cause short circuits between the braid and inner conductor!  
**DO NOT FOLD BACK THE BRAID!**
- STEP 4:** You can use the label to check the stripping dimensions.
- STEP 5:** Slide the connector gently on the cable until the PushPin™ is visible as shown on picture 5a to indicate proper installation of the cable. Do not twist the connector during this operation. Make sure that the braid goes nicely into the connector.
- STEP 6:** Insert the connector/cable in the tool and close the tool handles completely to compress. The alternative compression tool shown on picture 6a can only be used for F-connectors.

Description	Item no.
Cable cutter – drop	98028621-01
Rotary cable stripper RG11	98501102
Compression tool RG11 universal	98029073
Compression tool All Size (only for F)	98029072

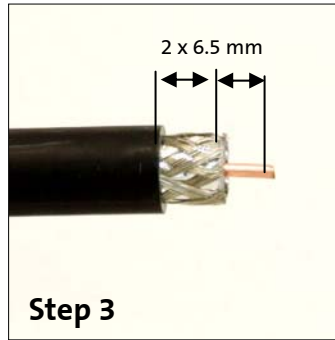

Distributor:

**CABELCON**  
connectors

ApS, Industriparken 10, DK 4760 Vordingborg  
Tel: +45 55 98 55 99 · Fax: + 45 55 98 55 04  
cabelcon@cabelcon.dk · www.cabelcon.dk